



# How to program 1 of 4 slots for the USB-UIRT to wake up pc from sleep mode With the USB-UIRT Helper Utility

- 1.) Download the Learn Helper Utility here: [http://www.usbuirt.com/lrnhelper\\_0\\_0\\_5.zip](http://www.usbuirt.com/lrnhelper_0_0_5.zip)
- 2.) Extract zip file to folder: **lrnhelper\_0\_0\_5**  
In the folder: **lrnhelper\_0\_0\_5**  
Double-click to run the file: **lrnhelper.exe**  
The following will show

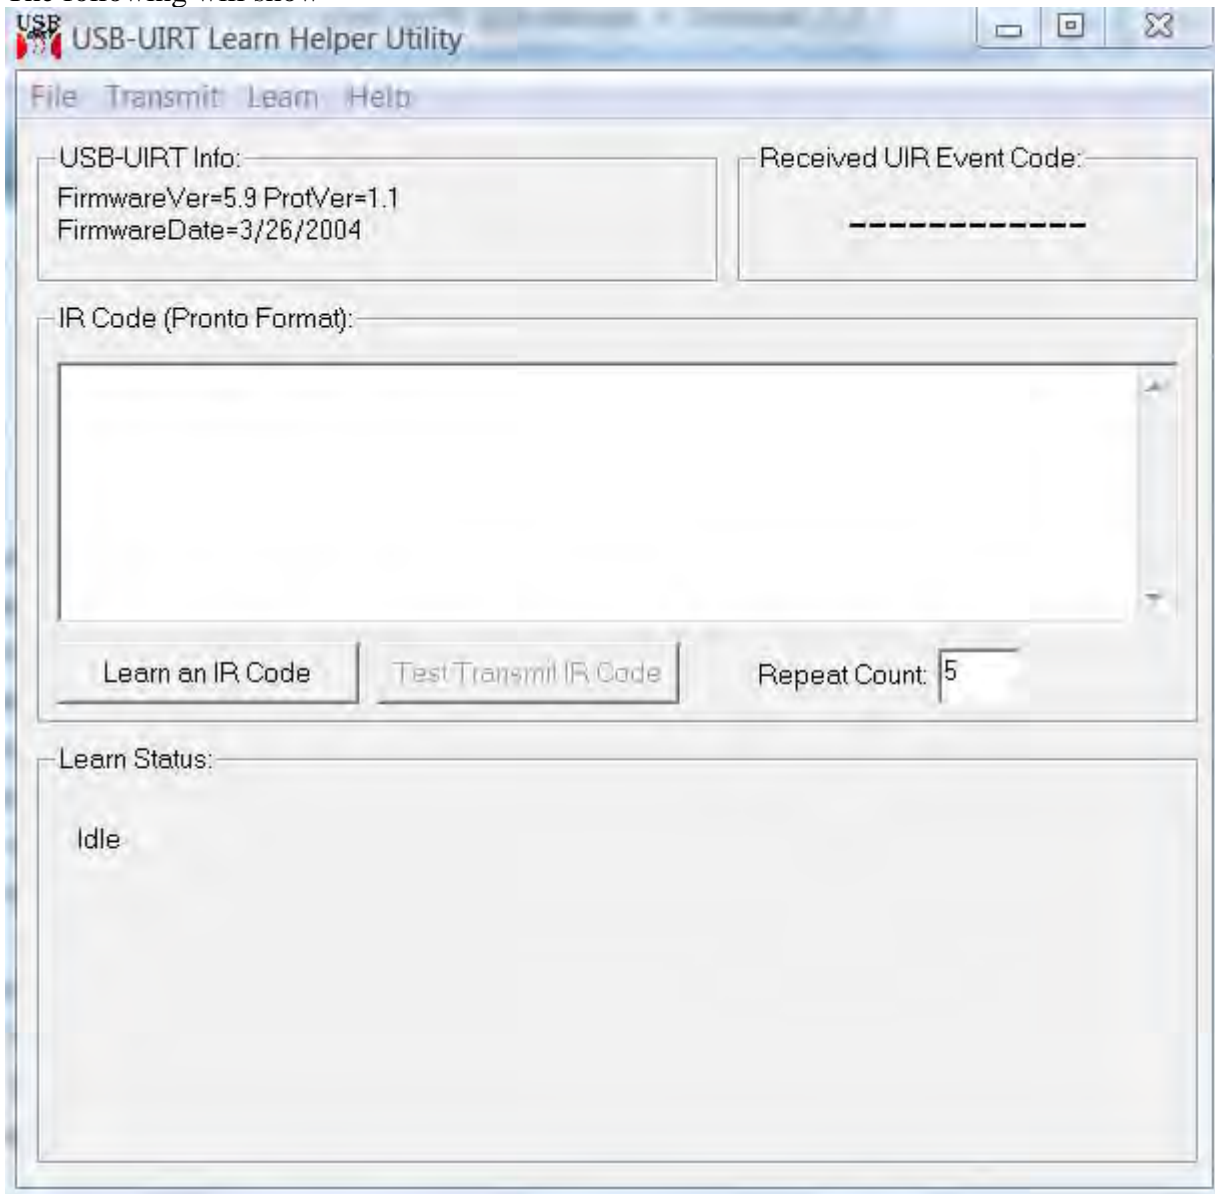


3.) Select menu **File** then **Wake-Up Configuration**

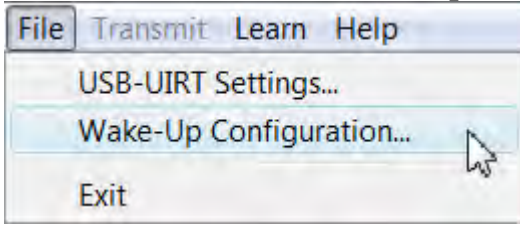

The following will show


A- Select the Wake-up IR Slot drop down for the slot number you wish to use there are 4 slots you can program codes for.

B - Click the Learn Button

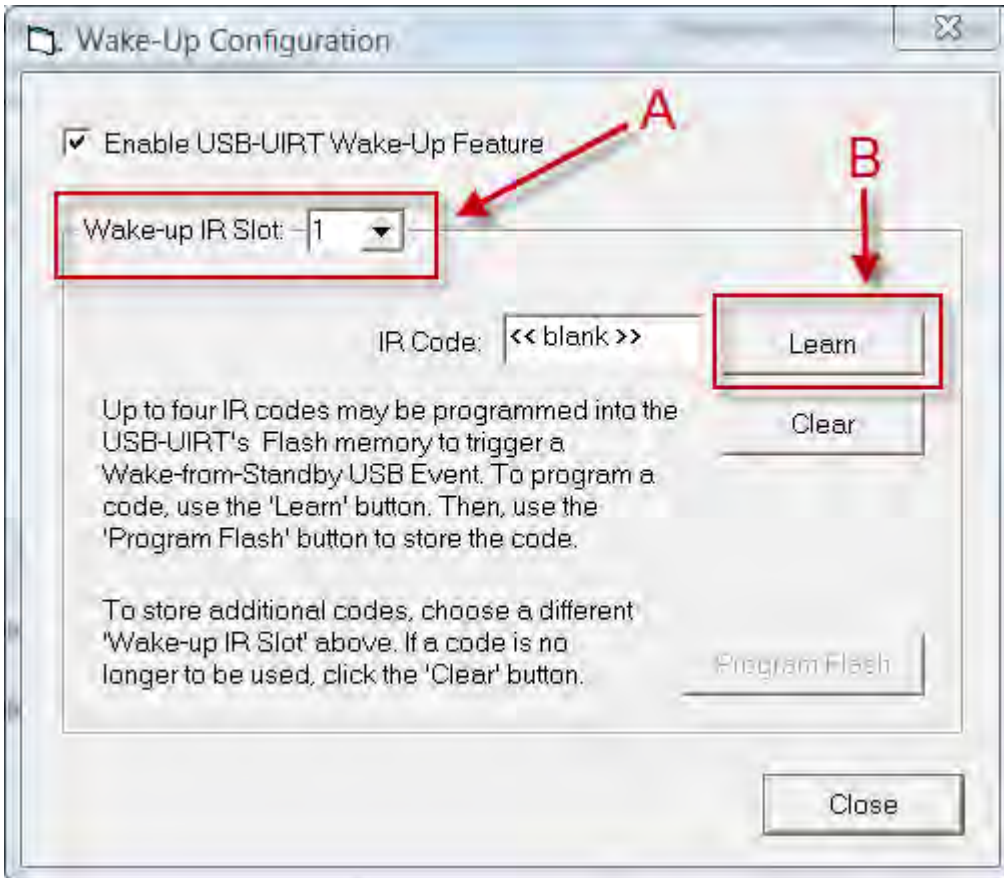


The following will show


Now push the button on your remote that you want to use to wake the PC from sleep

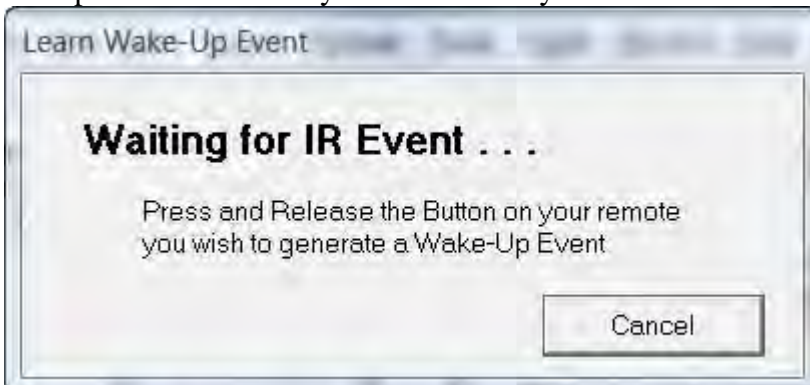

Then the IR code for that button is stored as shown below

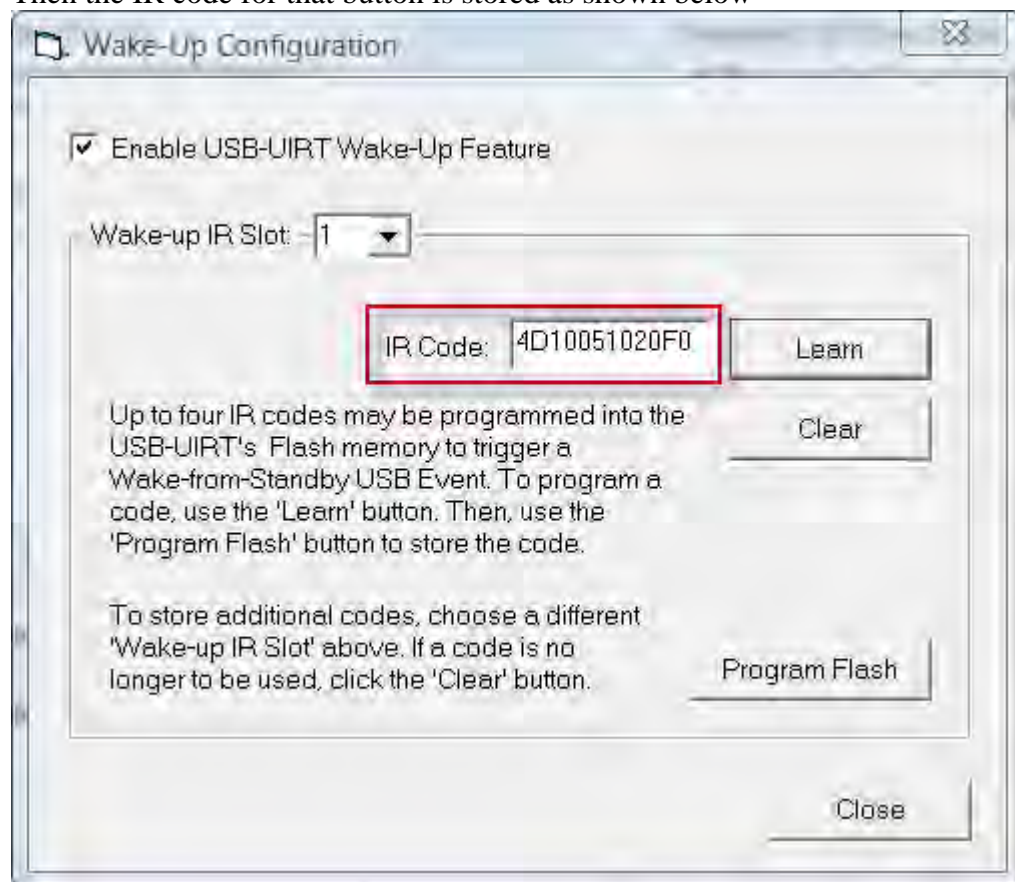

To store the IR code to the USB-UIRT  
Click on the **Program Flash** button

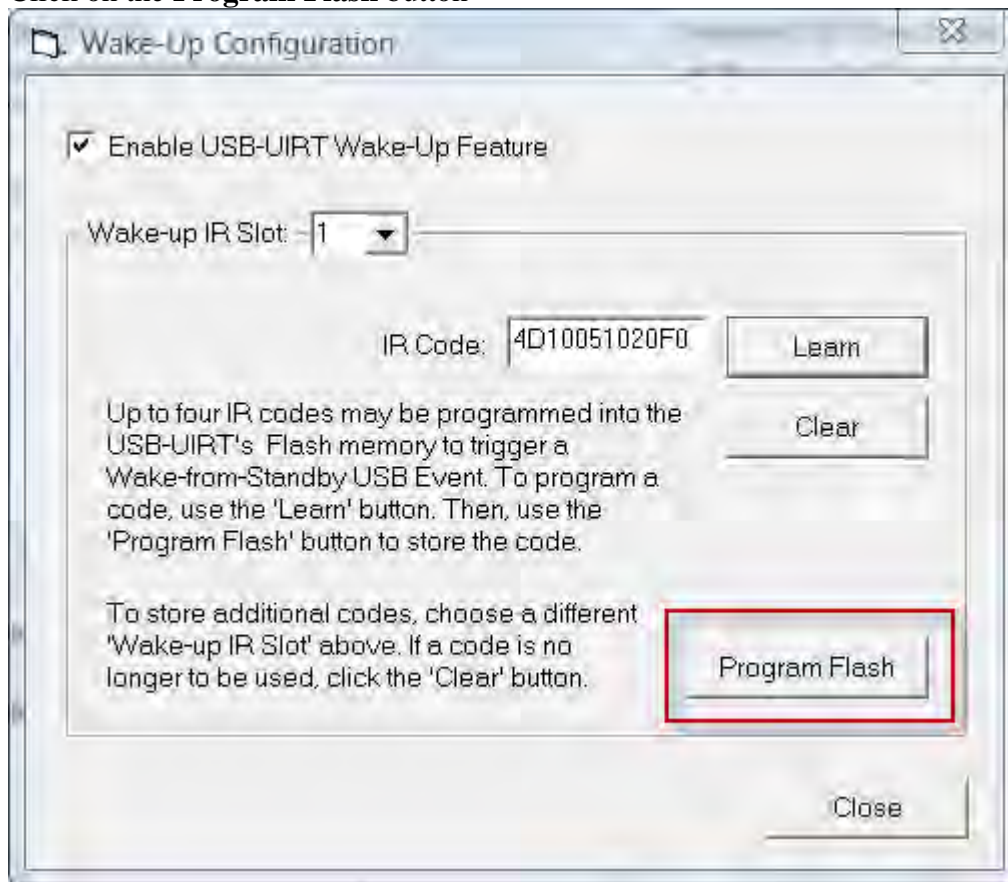

Then click the **Close** button

To test your results, put you computer in sleep mode then press that button on your remote.

Document created: 11-29-09

By Scat